



## The Bed.


Refer to Drawing 5.

1. Cut and trim the piece of channel to length, ensuring the ends are perfectly square.
2. Mark the centres for the spring holes on the surface of the bed. Using a suitably sized holesaw cut the holes slightly larger than the OD of your springs.
3. Cut the notches out of both ends of the front of the bed.

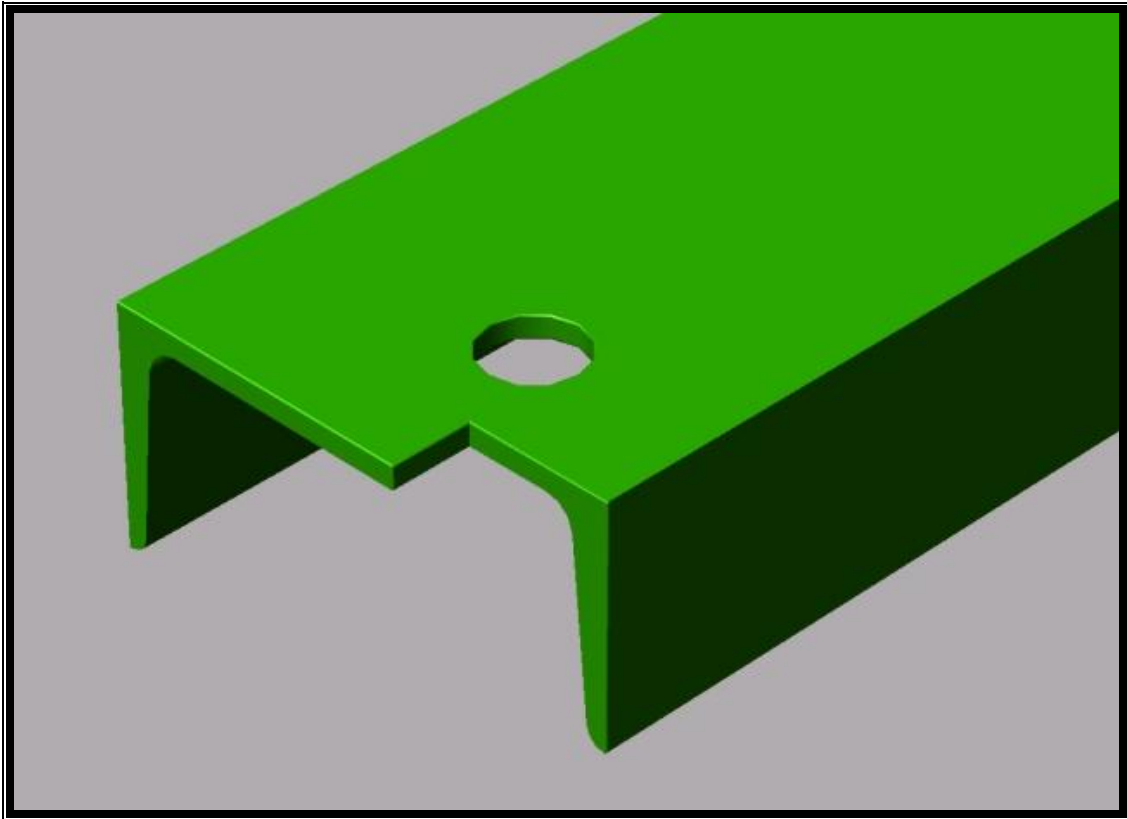

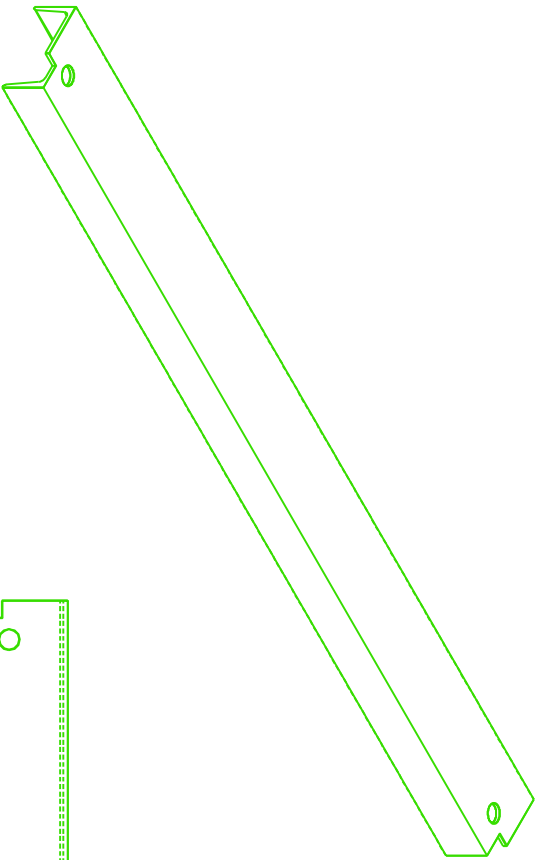

TOP

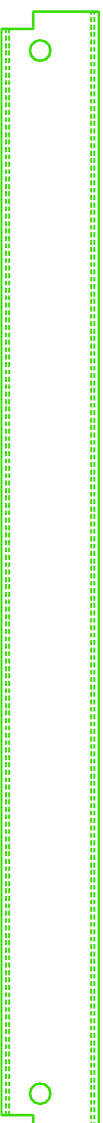

DIMENSIONS OMITTED FROM THIS SAMPLE



END

FRONT

MATERIALS	NUMBER REQUIRED	1	PROPERTY OF RORRY DESIGN www.rorrtty-design.com			
	CLEAN UP ALL SHARP EDGES		DRAWN	R F-S	SHEET METAL FOLDER	
			CHECKED		TITLE	
			DATE	13.03.04	FOLDER BED	
			SHEET	DF		
			SCALE	10:1	DRAWING NUMBER	
MATERIALS OMITTED					5	
	ALL MEASUREMENTS IN MILLIMETRES UNLESS OTHERWISE STATED					